



1. Step
Plug in plastic inserts till they clearly clicked.

JH-AF60

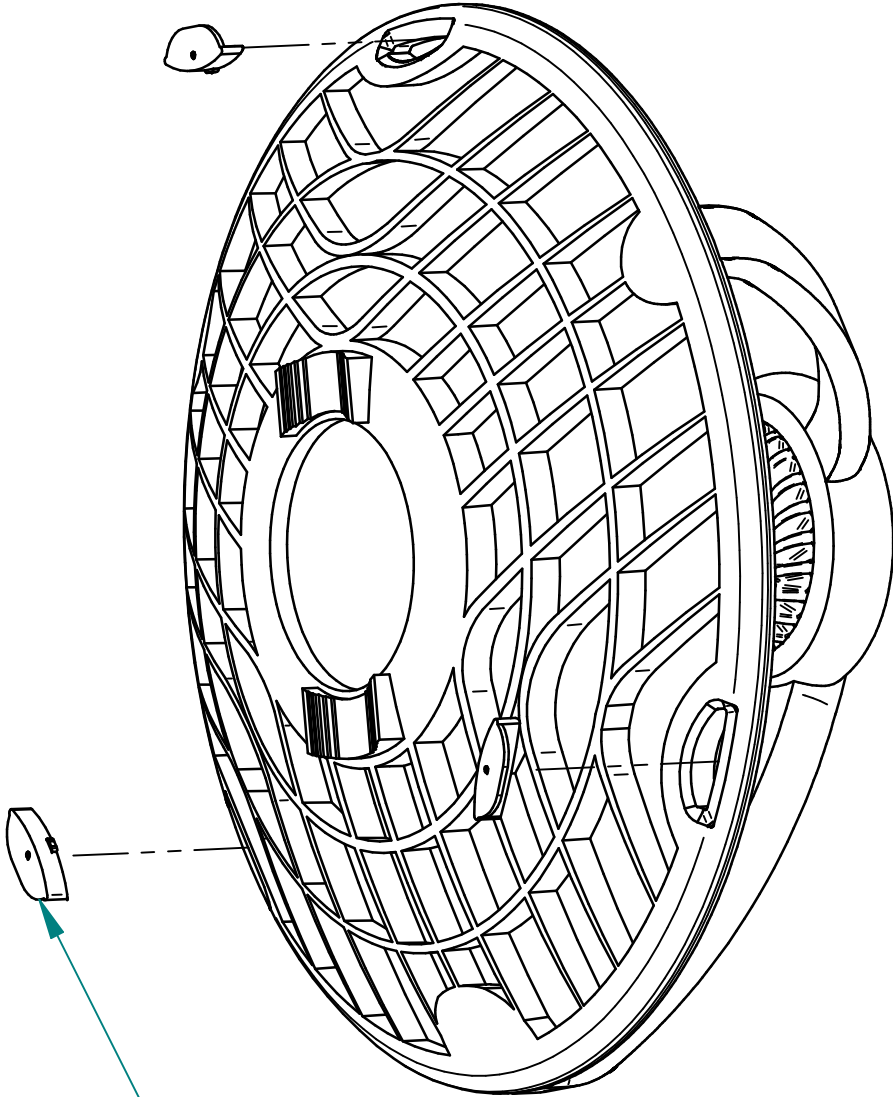


3x Plastic inserts

2.Step
Put on metal collar, secure it by screws to plastic inserts and 2 screws to free ends. Plug on ethernet cabel.

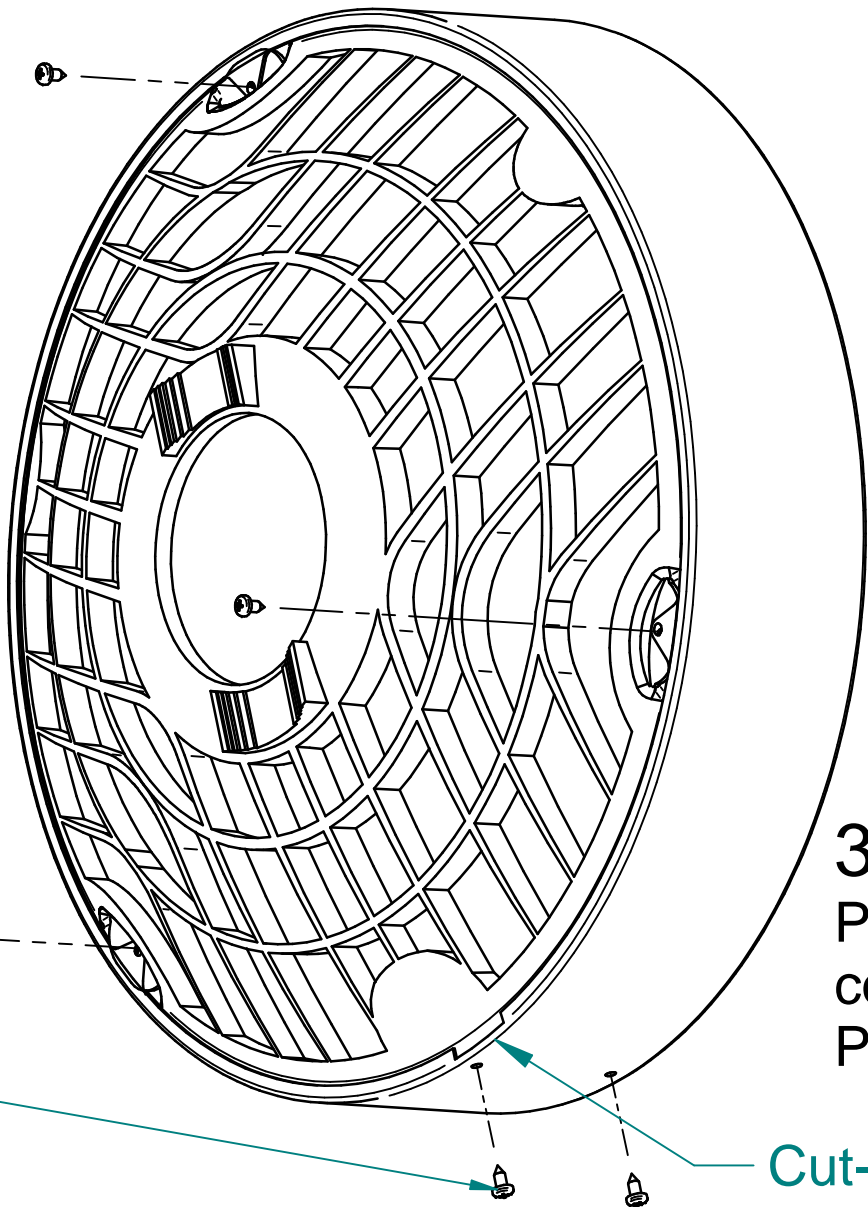

5x Screws

Cut-off in collar for cabel access.

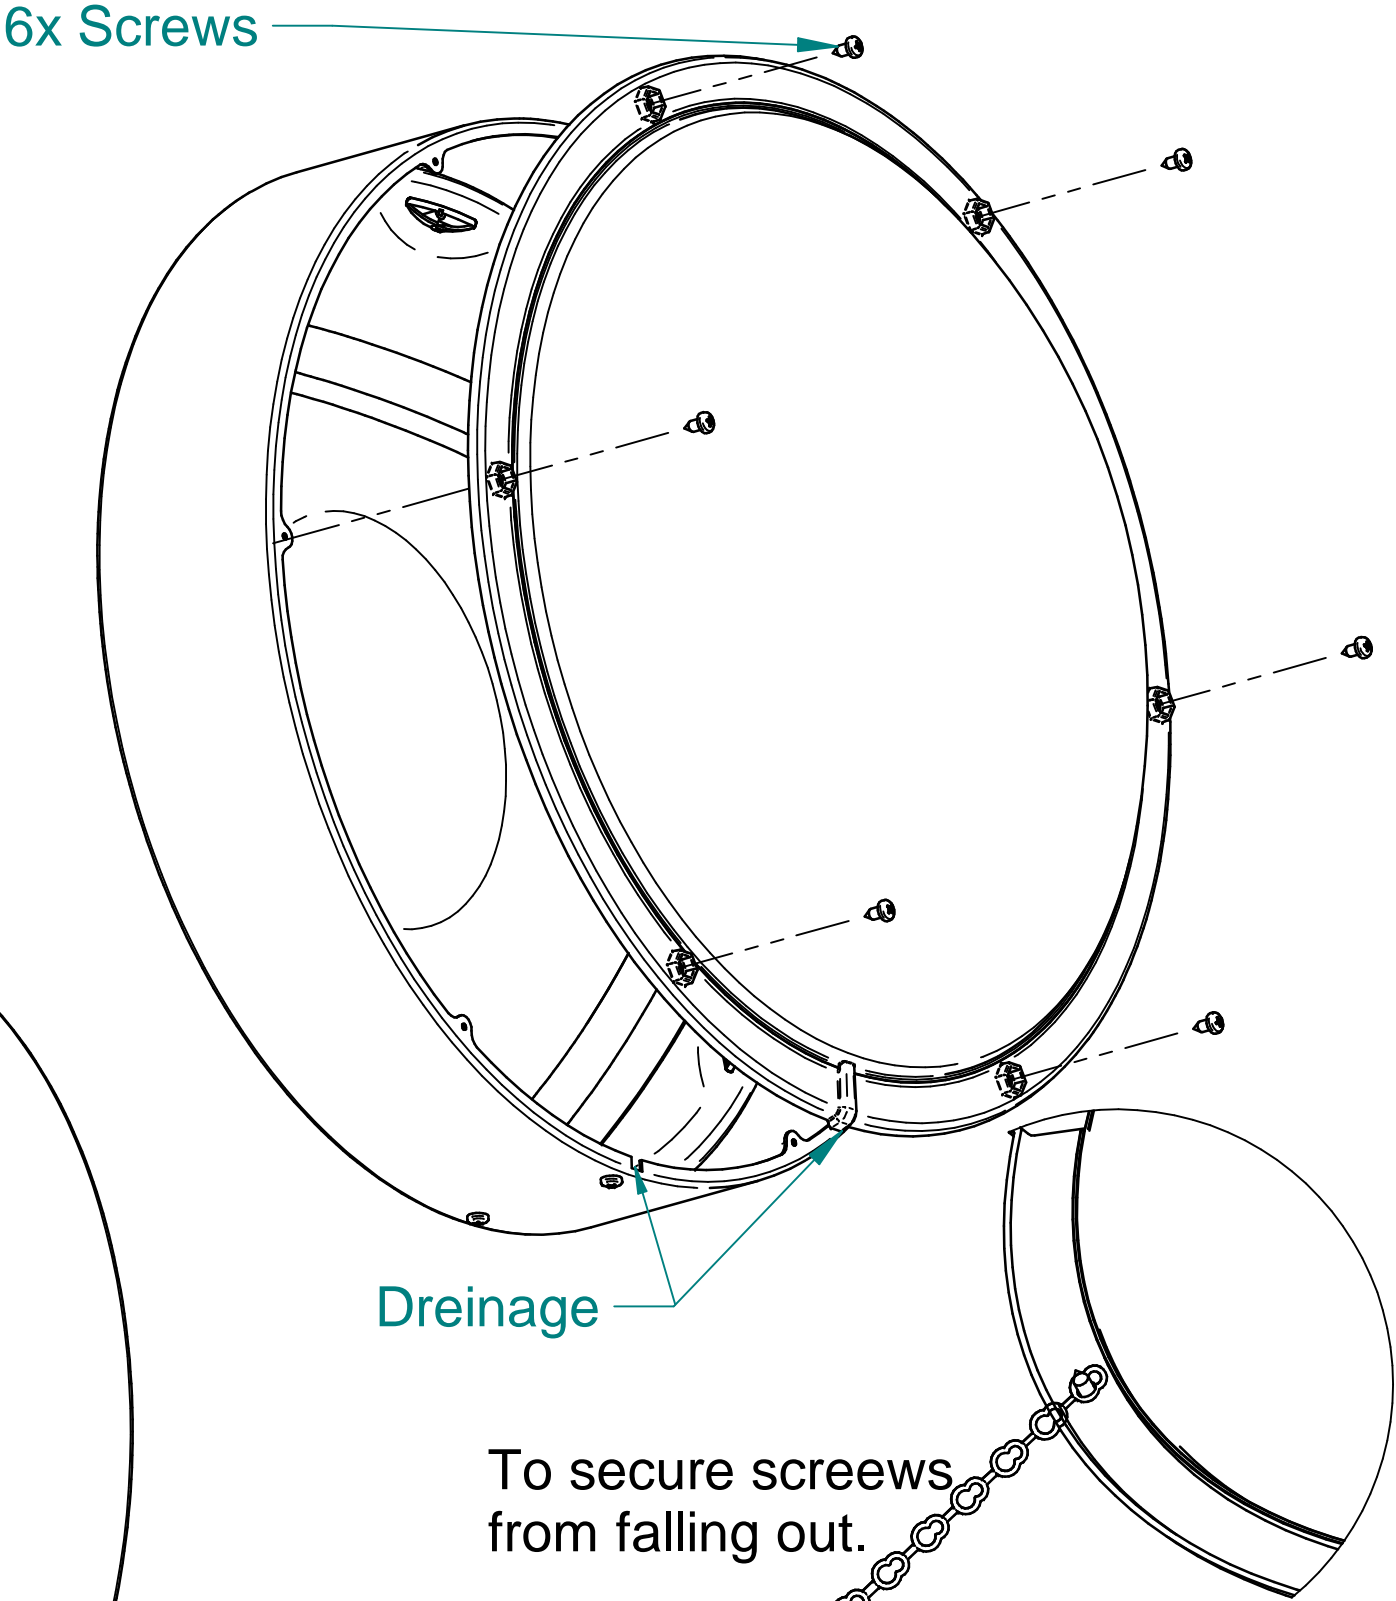

6x Screws

Drainage

To secure screws from falling out.

3.Step
Put on plastic cover and sreew it on collar.
Plastic cover must be well tightened.

